



# **FlameGard 5 MSIR**

**Multi-Spectral Infrared Flame  
Detector**

HART Specification

# Table of Contents

<b>1.0 INTRODUCTION .....</b>	<b>1</b>
1.1 Scope .....	1
1.2 Purpose .....	1
1.3 Who should use this document?.....	1
1.4 References .....	1
<b>2.0 DEVICE IDENTIFICATION .....</b>	<b>1</b>
<b>3.0 PRODUCT OVERVIEW .....</b>	<b>2</b>
3.1 Getting Started.....	2
<b>4.0 PRODUCT INTERFACES.....</b>	<b>3</b>
4.1 Process Interface .....	3
4.2 Host Interface .....	3
4.3 Local Interfaces, Jumpers, and Switches.....	3
<b>5.0 DEVICE VARIABLES .....</b>	<b>3</b>
<b>6.0 DYNAMIC VARIABLES.....</b>	<b>3</b>
6.1 Primary Variable = FlameGard 5 MSIR HART Operating Mode .....	3
6.2 Secondary, Tertiary, and Quaternary Variables: Not Applicable .....	3
<b>7.0 STATUS INFORMATION.....</b>	<b>4</b>
<b>8.0 UNIVERSAL COMMANDS .....</b>	<b>5</b>
<b>9.0 COMMON PRACTICE COMMANDS .....</b>	<b>6</b>
9.1 Supported Commands .....	6
9.2 Burst Mode .....	6
9.3 Catch Device Variable.....	6
<b>10.0 DEVICE SPECIFIC COMMANDS .....</b>	<b>7</b>
10.1 Command #128: Read DIP Switch Override Register (MODBUS Reg 0x07).....	7
10.2 Command #129: Write DIP Switch Override Register (MODBUS Reg 0x07).....	7
10.3 Command #130: Read DIP Switch Settings Register (MODBUS Reg 0x46) .....	8
10.4 Command #131: Read Unit Options Register (MODBUS Reg 0x08).....	8
10.5 Command #132: Write Unit Options Register (MODBUS Reg 0x08).....	9
10.6 Command #133: Read COPM Fault Status Registers.....	9
10.7 Command #134: Clear COPM Faults (MODBUS Reg 0x13).....	10
10.8 Command #135: Remote Alarm Reset (MODBUS Reg 0x11).....	10
10.9 Command #136: Remote Alarm Test (MODBUS Reg 0x12) .....	11
10.10 Command #137: Read Instrument Temperature (MODBUS Reg 0x14).....	11
10.11 Command #138: Set/Reset Test Lamp Mode (MODBUS Reg 0x5A) .....	12
10.12 Command #139: Read Test Lamp Mode (MODBUS Reg 0x5A) .....	12
10.13 Command #140: Read Alarm Delay (MODBUS Reg 0x5B) .....	13
10.14 Command #141: Set Alarm Delay (MODBUS Reg 0x5B).....	13

10.15	Command #142: Read Time Stamp (MODBUS Reg 0x6A, 0x6B, 0x6C).....	14
10.16	Command #143: Read Event Logging Counters (MODBUS Reg 0xA8, 0xB0, 0xB8, 0xC0) .	14
10.17	Command #144: Clear Event Logging Counters (MODBUS Reg 0xC1) .....	15
10.18	Command #145: Read Warning Event Log.....	15
10.19	Command #146: Read Alarm Event Log .....	16
10.20	Command #147: Read Fault Event Log.....	16
10.21	Command #148: Read Maintenance Event Log.....	17
10.22	Command #149: Set Clock.....	18
10.23	Command #150: Read Clock .....	18
10.24	Command #151: Set Run Time Meter .....	19
10.25	Command #152: Read Run Time Meter .....	19
10.26	Command #153: Read Power Cycle Flag.....	20
10.27	Command #154: Set Event Log Index.....	20
10.28	Command #155: Read Event Log Index.....	21
10.29	Command #156: Read Remote Alarm Test Mode.....	21
10.30	Command #157: Set Warning Relay Latched Status .....	22
10.31	Command #158: Read Warning Relay Latched Status .....	22
10.32	Command #159: Set Warning Relay De-Energized/Energized Status.....	22
10.33	Command #160: Read Warning Relay De-Energized/Energized Status.....	23
10.34	Command #161: Set Alarm Relay Latched Status .....	23
10.35	Command #162: Read Alarm Relay Latched Status .....	24
10.36	Command #163: Set Alarm Relay De-Energized/Energized Status.....	24
10.37	Command #164: Read Alarm Relay De-Energized/Energized Status.....	25
10.38	Command #165: Set Sensitivity Level .....	25
10.39	Command #166: Read Sensitivity Level .....	26
10.40	Command #167: Read PV Mode.....	26
10.41	Command #168: Read Error Status.....	27
10.42	Command #169: Read Line Voltage.....	27
10.43	Command #170: Read Analog Voltage.....	28
<b>11.0</b>	<b>TABLES.....</b>	<b>29</b>
11.1	FlameGard 5 MSIR HART – Device Specific Commands Summary.....	29
11.2	FlameGard 5 MSIR HART – Operating Mode - PV Values.....	30
11.3	COPM Fault Register .....	31
11.4	Fault Event Log – Cause Description .....	31
11.5	Maintenance Event Log – Cause Description .....	31
11.6	DIP Switch Settings Register.....	32
11.7	Unit Options Settings Register.....	33
<b>12.0</b>	<b>PERFORMANCE .....</b>	<b>34</b>
12.1	Sampling Rates.....	34
12.2	Power-up .....	34
12.3	Device Reset .....	34
12.4	Self-Test .....	34
12.5	Command Response Delay.....	34
12.6	Busy and Delayed-Response .....	34
12.7	Long Messages.....	34
12.8	Non-Volatile Memory.....	34
12.9	Operating Modes .....	35
12.10	Write Protection .....	35

13.0	ANNEX A. CAPABILITY CHECKLIST.....	35
14.0	ANNEX B. DEFAULT CONFIGURATION.....	36
15.0	ANNEX C. DEVICE DESCRIPTOR LANGUAGE MENU .....	37

## Table of Tables

Table 1: Field Device Identification Data .....	1
Table 2: Error Status Information .....	4
Table 3: FlameGard 5 MSIR HART – Common Practice Commands.....	6
Table 4: FlameGard 5 MSIR HART – Device Specific Commands.....	29
Table 5: FlameGard 5 MSIR HART - Operating Mode - PV Values.....	30
Table 6: COPM Fault Register Values.....	31
Table 7: Fault Event Log – Cause Description.....	31
Table 8: Maintenance Event Log – Cause Description.....	32
Table 9: DIP Switch Settings Register Description.....	32
Table 10: Unit Options Settings.....	33
Table 11: Command Response Times .....	34
Table 12: Capability Checklist .....	35
Table 13: Default Configuration.....	36

## 1.0 Introduction

### 1.1 Scope

The FlameGard 5 MSIR HART Multi-Spectral Infrared (MSIR) flame detector complies with HART Protocol Revision 6.0. This document specifies all of the device specific features and documents HART Protocol implementation details. The functionality of this Field Device is described sufficiently to allow its proper application in a process and its complete support in HART capable Host Applications.

There shall be no changes in any of the performance criteria of the FlameGard 5 MSIR due to the addition of the HART protocol communications channel.

### 1.2 Purpose

This specification is designed to complement the FlameGard 5 MSIR Instruction Manual by providing a complete description of this field device from a HART Communications perspective.

### 1.3 Who should use this document?

This specification is designed to be a technical reference for HART capable host application developers, system integrators, and knowledgeable end users.

### 1.4 References

DOCUMENT NAME	DOCUMENT RELATIONSHIP
HART Communications Protocol Specifications	This is used to insure compliance with the HART Communication Protocol.
FlameGard 5 MSIR Instruction Manual	This is the MSA FlameGard 5 MSIR Product Instruction Manual.

## 2.0 Device Identification

The following Table 1 is the Field Device Identification Data for the instrument.

**Table 1: Field Device Identification Data**

Manufacturer's Name	General Monitors, Inc.	Model Number	FL4000 HART
HART ID Code	223 (DF Hex)	Device Type Code:	128 (80 Hex)
HART Protocol Revision	6.0	Device Revision:	1
Number of Device Variables	0		
Physical Layers	1		


<b>Manufacturer's Name</b>	<b>General Monitors, Inc.</b>	<b>Model Number</b>	<b>FL4000 HART</b>
<b>Supported</b>			
<b>Physical Device Category</b>	<b>FSK</b>		

### 3.0 Product Overview

The FlameGard 5 MSIR HART is a Multi-Spectral Infrared (MSIR) Flame Detector from General Monitors. The FlameGard 5 MSIR HART employs state-of-the-art infrared detectors and a sophisticated Artificial Neural Network (ANN) to produce a system that is highly immune to false alarms such as, arc-welding, hot objects, and other sources of radiation.

#### 3.1 Getting Started

In order to enable HART communication with the FlameGard 5 MSIR HART detector, users may employ several means including HART handheld communicators or PC-based systems. Using a PC-based software application and a HART interface modem, for example, allow operators to access information from the FlameGard 5 MSIR HART. A typical setup is illustrated in Figure 1.

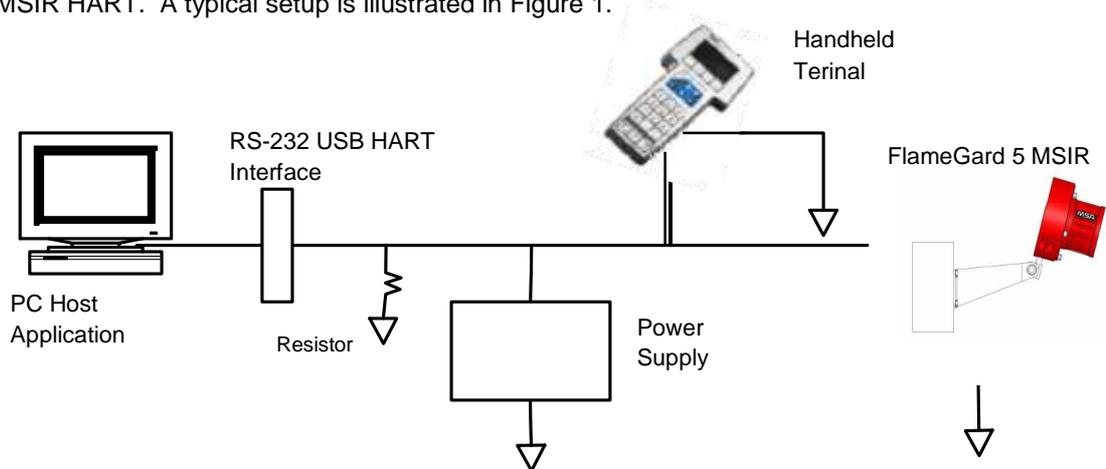

**Figure 1 Connecting a PC to a HART device**

Once the detector is installed (see FlameGard 5 MSIR Instruction Manual) and connected to a PC, host application, or handheld terminal, the master will commonly begin communication to the FlameGard 5 MSIR HART by using the HART Command #0. The field device will then respond only if its tag matches. The data in the reply to Command #11 is identical to that of Command #0, so the master can then construct the Unique Identifier for use with further commands.

---

**NOTE:** Handheld device allows for the retrieval of diagnostic information and input of device settings as needed and should not be used as a permanent part of a safety system.

---

## **4.0 Product Interfaces**

### **4.1 Process Interface**

This section describes all interfaces between the devices and the measured process.

#### **4.1.1 Sensor Input Channels**

The unit's pyroelectric sensors continually collect data at predetermined wavelengths. These are interpreted by an advanced Artificial Neural Network algorithm to detect flame within the field of view and to reject signals from false flame sources. The results are output to the user via a 4 – 20mA current loop, 3 relays, a HART digital interface, and a MODBUS digital interface

### **4.2 Host Interface**

The HART interface uses the 4 – 20mA current loop. Refer to the Installation Manual for connection details.

#### **4.2.1 Analog Output: FlameGard 5 MSIR Mode**

The FlameGard 5 MSIR Mode is output to the user as the primary variable of the HART protocol. Table 5 shows the interpretation of this variable

### **4.3 Local Interfaces, Jumpers, and Switches**

#### **4.3.1 Local Controls And Displays**

Refer to the Installation Manual for connection details

#### **4.3.2 Internal Jumpers And Switches**

Refer to the Installation Manual for connection details

## **5.0 Device Variables**

There are no device variables exposed to the user.

## **6.0 Dynamic Variables**

There is only one Dynamic Variable exposed to the user.

### **6.1 Primary Variable = FlameGard 5 MSIR HART Operating Mode**

The device mode is the variable, which corresponds to the MODBUS register 0x01.

### **6.2 Secondary, Tertiary, and Quaternary Variables: Not Applicable**

There are none defined for the FlameGard 5 MSIR HART product.

## 7.0 Status Information

The error status, which is returned via Common Practice Command #48, is shown in Table 2 and corresponds to MODBUS register 0x01. This also shows any COPM Faults. These bits may be set at power up to indicate an instrument failure. They may also be set by a failure detected during continuous background diagnostic testing.

**Table 2: Error Status Information**

Byte	Bit	Description	Class	Device Status Bits Set
0 (MOD-BUS Reg #2 MSB)	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Reset Short Error	Error	4,7
1 (MOD-BUS Reg #2 LSB)	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	COPM Fault	Error	4,7
	4	Low Voltage	Error	4,7
	5	Not Used	N/A	
	6	Data Flash Error	Error	4,7
	7	Code Flash Error	Error	4,7
2 (MOD BUS Reg #6)	0	Detector 2.2 um Error	Error	4,7
	1	Detector 4.9 um Error	Error	4,7
	2	Detector 4.3 um Error	Error	4,7
	3	Detector 4.45 um Error	Error	4,7
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	COPM Fault	Error	4,7
3	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Not Used	N/A	
4	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Not Used	N/A	

Byte	Bit	Description	Class	Device Status Bits Set
5	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Not Used	N/A	
6	0	Maintenance Required	Error	4,7
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Not Used	N/A	
7	0	Not Used	N/A	
	1	Not Used	N/A	
	2	Not Used	N/A	
	3	Not Used	N/A	
	4	Not Used	N/A	
	5	Not Used	N/A	
	6	Not Used	N/A	
	7	Not Used	N/A	

These bits may be set at power up to indicate an instrument failure. They may also be set by a failure detected during continuous background diagnostic testing.

## 8.0 Universal Commands

Command 3 returns the current loop variable and the primary variable for a total of 9 bytes returned. Command 9 returns the PV only.

## 9.0 Common Practice Commands

The following common practice commands are implemented.

### 9.1 Supported Commands

The following common-practice commands shown in Table 3 are implemented:

**Table 3: FlameGard 5 MSIR HART – Common Practice Commands**

Command Number	Byte Number	Meaning
Command 38	N/A	Reset Configuration Changed Flag.
Command 48	0	Read additional Device Status.
Command 48	1	Returns Device Error Status = MODBUS Register 0x02 Hi Byte
Command 48	2	Returns Device Error Status = MODBUS Register 0x02 Hi Byte
Command 48	3	Returns 0
Command 48	4	Returns 0
Command 48	5	Returns 0
Command 48	6	Returns 0x01 – “Maintenance Required”
Command 48	7	Returns 0

### 9.2 Burst Mode

The FlameGard 5 MSIR HART does not support Burst Mode.

### 9.3 Catch Device Variable

This Field Device does not support Catch Device Variable.

## 10.0 Device Specific Commands

The Device Specific commands are used strictly for the unique features of the FlameGard 5 MSIR HART and at the discretion of General Monitors. They are described here in section 10.0 and are summarized in Table 4

### 10.1 Command #128: Read DIP Switch Override Register (MODBUS Reg 0x07)

Read the DIP Switch Override Register.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Bits	Override Bit – LSB = 1, enabled: Allow Override. LSB = 0, disabled: Disallow Override

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.2 Command #129: Write DIP Switch Override Register (MODBUS Reg 0x07)

Write the DIP Switch Override Register. This command loads the unit options based on the values of either the flash or the actual DIP switch settings.

Request Data Bytes

Byte	Format	Description
0	Bits	Override Bit – LSB = 1, enabled: Allow Override. LSB = 0, disabled: Disallow Override

Response Data Bytes

Byte	Format	Description
0	Bits	Override Bit – LSB = 1, enabled: Allow Override. LSB = 0, disabled: Disallow Override

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1- 2		Undefined
3	Error	Passed Parameter Too Large
4 – 127		Undefined
5	Error	Too Few Data Bytes Received

### 10.3 Command #130: Read DIP Switch Settings Register (MODBUS Reg 0x46)

Reads the DIP Switch Settings Register.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Bits	DIP Switch Settings Table 9

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.4 Command #131: Read Unit Options Register (MODBUS Reg 0x08)

Reads the Unit Options Register.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Bits	Unit Options – See Table 10

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.5 Command #132: Write Unit Options Register (MODBUS Reg 0x08)

Write the Unit Options Register.

Request Data Bytes

Byte	Format	Description
0	Bits	Unit Options – See Table 10

**Response Data Bytes**

Byte	Format	Description
0	Bits	Unit Options – See Table 10

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 6		Undefined
7	Error	Write Protect Mode
8 – 127		Undefined

### 10.6 Command #133: Read COPM Fault Status Registers

Reads the COPM Fault Status Registers.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Bits	COPM Fault Register (MODBUS Reg 0x06) – See Table 6
1 - 2	Unsigned-16	Sensor 1 Fault Count
3 - 4	Unsigned-16	Sensor 2 Fault Count
5 - 6	Unsigned-16	Sensor 3 Fault Count
7 - 8	Unsigned-16	Sensor 4 Fault Count

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.7 Command #134: Clear COPM Faults (MODBUS Reg 0x13)**

Clear the COPM Faults Register.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.8 Command #135: Remote Alarm Reset (MODBUS Reg 0x11)**

Reset the Remote Alarm. This resets any relays which might be latched.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.9 Command #136: Remote Alarm Test (MODBUS Reg 0x12)

Test the Remote Alarm.

#### Request Data Bytes

Byte	Format	Description
0	Bits	Test Remote Alarm: 0 = Turn off, 1 = Turn on Alarm

#### Response Data Bytes

Byte	Format	Description
0	Bits	Test Remote Alarm: 0 = Alarm Off, 1 = Alarm On

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.10 Command #137: Read Instrument Temperature (MODBUS Reg 0x14)

Read the temperature of the instrument.

#### Request Data Bytes

Byte	Format	Description
None	N/A	N/A

#### Response Data Bytes

Byte	Format	Description
0 - 1	Signed-16	Temperature Value
2	Enum	Degrees Celsius

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.11 Command #138: Set/Reset Test Lamp Mode (MODBUS Reg 0x5A)

Set/Reset the Test Lamp Mode.

#### Request Data Bytes

Byte	Format	Description
0	Bits	Set/Reset Test Mode: 1 = Test Mode, 0 = Non-Test Mode

#### Response Data Bytes

Byte	Format	Description
0	Bits	Test Mode: 1 = Test Mode, 0 = Non-Test Mode

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.12 Command #139: Read Test Lamp Mode (MODBUS Reg 0x5A)

Read the Test Lamp Mode.

#### Request Data Bytes

Byte	Format	Description
None	N/A	N/A

#### Response Data Bytes

Byte	Format	Description
0	Bits	Test Mode: 1 = Test Mode, 0 = Non-Test Mode

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.13 Command #140: Read Alarm Delay (MODBUS Reg 0x5B)

Read the Alarm Delay.

Request Data Bytes

Byte	Format	Description
None	N/A	N/A

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Delay

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 127		Undefined

### 10.14 Command #141: Set Alarm Delay (MODBUS Reg 0x5B)

Set the Alarm Delay. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Delay

Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Alarm Delay

Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1 – 2		Undefined
3	Error	Passed Parameter Too Large
4		Undefined
5	Error	Too Few Data Bytes Received
6 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

### 10.15 Command #142: Read Time Stamp (MODBUS Reg 0x6A, 0x6B, 0x6C)

Read the last time that the test lamp check was successfully performed.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 2	Date	Last Successful Test Lamp Check
3	Unsigned-8	Last Successful Test Lamp Check – Hour
4	Unsigned-8	Last Successful Test Lamp Check - Minute

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.16 Command #143: Read Event Logging Counters (MODBUS Reg 0xA8, 0xB0, 0xB8, 0xC0)

This command reads the four Event Logging Counters to give the number of events which have been stored in each of the event logs. The four event logs record the most recent 10 events which have been recorded by the instrument. These are the most recent: warning time, alarm time, fault time, and test lamp checkout time. The event logs are stored in most recent order and going back to the least recent event. The most recent event is event number 0 and the least recent is event number 9. If fewer than 10 events have been recorded, then the least recent event times will indicate a time stamp of January 1, 2000.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 1	Unsigned-16	Warning Event Counter
2 - 3	Unsigned-16	Alarm Event Counter
4 – 5	Unsigned-16	Fault Event Counter
6 - 7	Unsigned-16	Maintenance Event Counter

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.17 Command #144: Clear Event Logging Counters (MODBUS Reg 0xC1)**

This resets the event logging counters to zero – effectively clearing out the event logs of all of the previous information.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.18 Command #145: Read Warning Event Log**

Read Warning Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Event Running Time (in Seconds)
4 - 6	Date	Event Date – Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.19 Command #146: Read Alarm Event Log**

Read Alarm Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Event Running Time (in Seconds)
4 - 6	Date	Event Date – Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.20 Command #147: Read Fault Event Log**

Read Fault Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Event Running Time (in Seconds)
4 - 6	Date	Event Date – Day, Month, Year – 1900

7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10	Unsigned-8	Event Cause – See Table 7

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.21 Command #148: Read Maintenance Event Log**

Read Maintenance Event Log as specified by the event log number. Event 0 is the most recent event. Event 1 is the one just before that and so forth.

**Request Data Bytes**

Byte	Format	Description
None	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Event Running Time (in Seconds)
4 - 6	Date	Event Date – Day, Month, Year – 1900
7	Unsigned-8	Event Hour
8	Unsigned-8	Event Minute
9	Unsigned-8	Event Second
10	Unsigned-16	Event Cause – See Table 8

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.22 Command #149: Set Clock

Set the internal real-time clock.

**Request Data Bytes**

Byte	Format	Description
0 – 2	Date	Date in Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

**Response Data Bytes**

Byte	Format	Description
0 – 2	Date	Date in Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.23 Command #150: Read Clock

Read the internal real-time clock setting.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 – 2	Date	Date in Day, Month, Year-1900
3	Unsigned-8	Hours
4	Unsigned-8	Minutes
5	Unsigned-8	Seconds

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.24 Command #151: Set Run Time Meter**

Set the internal run time meter.

**Request Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Run Time Meter Value

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Run Time Meter Value

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.25 Command #152: Read Run Time Meter**

Read the internal run time meter.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 - 3	Unsigned-32	Run Time Meter Value

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.26 Command #153: Read Power Cycle Flag

Read the Power cycle flag. This flag is set equal to one whenever the power is cycled to the unit. When the clock is set via either by command number 149 or 151, this flag is reset to zero.

#### Request Data Bytes

Byte	Format	Description
0	N/A	N/A

#### Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Power Cycled Flag Value

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.27 Command #154: Set Event Log Index

Set the Event Log Index to a specified value. This index is used by commands 145, 146, 147, & 148 to retrieve the event information stored in the instrument. The events are accumulated automatically by the instrument. The most recent event to have occurred is event #0. The next most recent event to have occurred is event # 1. The least recent event is event # 9.

#### Request Data Bytes

Byte	Format	Description
0	Unsigned-8	Event Index

#### Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Event Index

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.28 Command #155: Read Event Log Index

Read the Event Log Index to a specified value. This index is used by commands 145, 146, 147, & 148 to retrieve the event information stored in the instrument. The events are accumulated automatically by the instrument. The most recent event to have occurred is event #0. The next most recent event to have occurred is event # 1. The least recent event is event # 9.

#### Request Data Bytes

Byte	Format	Description
0	N/A	N/A

#### Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Event Index

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.29 Command #156: Read Remote Alarm Test Mode

Read the Remote Alarm Test Mode. A value of 0 indicates normal mode. A value of 1 indicates that the unit is in alarm test mode.

#### Request Data Bytes

Byte	Format	Description
0	N/A	N/A

#### Response Data Bytes

Byte	Format	Description
0	Unsigned-8	Remote Alarm Test Mode

#### Command-Specific Response Codes

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.30 Command #157: Set Warning Relay Latched Status

This sets the warning relay to either latched or un-latched. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

**Request Data Bytes**

Byte	Format	Description
0	Unsigned-8	Relay setting: 1 = latched, 0 = un-latched

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Relay setting: 1 = latched, 0 = un-latched

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

### 10.31 Command #158: Read Warning Relay Latched Status

This reads the latched status of the warning relay.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Relay setting: 1 = latched, 0 = un-latched

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.32 Command #159: Set Warning Relay De-Energized/Energized Status

This sets the warning relay to either De-Energized or Energized. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Relay setting: 1 = Energized, 0 = De-Energized

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

### 10.33 Command #160: Read Warning Relay De-Energized/Energized Status

This reads the Energized/De-Energized status of the warning relay.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Warning Relay Status: 1 = Energized, 0 = De-Energized

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.34 Command #161: Set Alarm Relay Latched Status

This sets the alarm relay to either latched or un-latched. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

**Request Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Latched, 0 = Unlatched

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Latched, 0 = Unlatched

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Write Protect Mode
17 - 127		Undefined

**10.35 Command #162: Read Alarm Relay Latched Status**

Read the Remote Alarm Test Mode. A value of 0 indicates normal mode. A value of 1 indicates that the unit is in alarm test mode.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Latched, 0 = Unlatched

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.36 Command #163: Set Alarm Relay De-Energized/Energized Status**

This sets the alarm relay status to be either De-Energized or Energized. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

**Request Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Energized, 0 = De-Energized

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Energized, 0 = De-Energized

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 - 15		Undefined
16	Error	Access Restricted
17 - 127		Undefined

### 10.37 Command #164: Read Alarm Relay De-Energized/Energized Status

This reads the Energized/De-Energized status of the alarm relay.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Alarm Relay Status: 1 = Energized, 0 = De-Energized

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.38 Command #165: Set Sensitivity Level

This sets the unit sensitivity. It may have the values of high, medium, or low. If the DIP override flag is set, then the command will return an ACCESS RESTRICTED code.

**Request Data Bytes**

Byte	Format	Description
0	Unsigned-8	Unit Sensitivity Level: 0 = High, 1 = Medium, 2 = Low

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Unit Sensitivity Level: 0 = High, 1 = Medium, 2 = Low

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1 -15		Undefined
16	Error	Access Restricted
17-127		Undefined

### 10.39 Command #166: Read Sensitivity Level

This reads the unit sensitivity. It may have values of high, medium, or low.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Unit Sensitivity Level: 0 = High, 1 = Medium, 2 = Low

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

### 10.40 Command #167: Read PV Mode

This reads the Primary Variable mode of the unit. It is the same as MODBUS register 0x01.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	PV = replicate of MODBUS Reg 0x01

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.41 Command #168: Read Error Status**

Read the Instrument Error Status. This is similar to MODBUS Register 0x02 except that the errors are prioritized as listed in the description.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0	Unsigned-8	Error Status: 0 = No Error, 1 = Low Voltage, 2 = COPM Fault, 3 = Reset Line Shorted, 4 = FLASH Error.

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.42 Command #169: Read Line Voltage**

Read the Line Voltage. This is the voltage as seen at the CPU input measured in Volts.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 – 3	Float	Line Voltage in Volts
4	Enum	VOLTS

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

**10.43 Command #170: Read Analog Voltage**

This replicates the functionality of Command #2 for the AMS.

**Request Data Bytes**

Byte	Format	Description
0	N/A	N/A

**Response Data Bytes**

Byte	Format	Description
0 – 3	Float	Analog Output
4 - 7	Float	Analog Output as a percent of full scale

**Command-Specific Response Codes**

Code	Class	Description
0	Success	No Command-Specific Errors
1-127		Undefined

## 11.0 Tables

### 11.1 FlameGard 5 MSIR HART – Device Specific Commands Summary

The following Table 4 is a summary of the FlameGard 5 MSIR HART Device Specific Commands. The Reg values in the Meaning Column denote the corresponding MODBUS Register.

**Table 4: FlameGard 5 MSIR HART – Device Specific Commands**

Command Number	Byte Number	Meaning
Command 128		Read DIP Switch Override Reg 0x07
Command 129		Write DIP Switch Override Reg 0x07
Command 130		Read DIP Switch Settings Register 0x46
Command 131		Read Unit Options Reg 0x08
Command 132		Write Unit Options Register 0x08
Command 133	0	Read COPM Fault Status Reg 0x06
Command 133	1	COPM Counts sensor 1 Reg 0x0D
Command 133	2	COPM Counts sensor 2 Reg 0x0E
Command 133	3	COPM Counts sensor 3 Reg 0x0F
Command 133	4	COPM Counts sensor 4 Reg 0x10
Command 134		Clear COPM Faults Reg 0x13
Command 135		Remote Alarm Reset Reg 0x11
Command 136		Remote Alarm Test Reg 0x012
Command 137		Read Sensor Temperature Reg 0x14
Command 138		Set/Reset Test Lamp Test Mode Reg 0x5A
Command 139		Read Test Lamp Test Mode Reg 0x5A
Command 140		Read Alarm Delay Reg 0x5B
Command 141		Set Alarm Delay Reg 0x5B
Command 142		Test Lamp Time Stamp Reg 0x6A, 0x6B, 0x6C
Command 143		Read Event Logging Counters: Reg 0xA8, 0xB0, 0xB8, 0xC0
Command 144		Clear Event Logging Counters Reg 0xC1
Command 145		Read Warning Event Log Register
Command 146		Read Alarm Event Log Event Register
Command 147		Read Fault Event Log Register

<b>Command Number</b>	<b>Byte Number</b>	<b>Meaning</b>
Command 148		Read Maintenance Event Log Register
Command 149		Set Clock
Command 150		Read Clock
Command 151		Set Run Time Meter
Command 152		Read Run Time Meter
Command 153		Read Power Cycle Flag
Command 154		Set Event Log Index
Command 155		Read Event Log Index
Command 156		Read Remote Alarm Test Register
Command 157		Set Warning Relay Latched Status
Command 158		Read Warning Relay Latched Status
Command 159		Set Warning Relay De-Energized/Energized
Command 160		Read Warning Relay De-Energized/Energized
Command 161		Set Alarm Relay Latched Status
Command 162		Read Alarm Relay Latched Status
Command 163		Set Alarm Relay De-Energized/Energized
Command 164		Read Alarm Relay De-Energized/Energized
Command 165		Set Unit Sensitivity
Command 166		Read Unit Sensitivity
Command 167		Read PV Mode
Command 168		Read Error Status
Command 169		Read Line Voltage
Command 170		Read Analog Voltage

## 11.2 FlameGard 5 MSIR HART – Operating Mode - PV Values

The following Table 5 is a summary of the FlameGard 5 MSIR HART Operating Modes:

**Table 5: FlameGard 5 MSIR HART - Operating Mode - PV Values**

<b>Operating Mode</b>	<b>Primary Variable Value in Decimal</b>
Power-Up Delay	1
Warn Non-Latching Only	2
Warn and Alarm Non-latching	3

Operating Mode	Primary Variable Value in Decimal
Warn Latching Only, Alarm Off	4
Alarm Latching Only	5
Warn & Alarm Latching	6
Ready State	7
Alarm Test	10
COPM Fault Detected	11
Warn Latching, Alarm Non-latching, Alarm On	12
Test Lamp Cycle	13
Test Lamp Cycle – Fire	14

### 11.3 COPM Fault Register

The following Table 6 describes the COPM Faults as reported by Command #133:

**Table 6: COPM Fault Register Values**

Bits	Cause
0	Detector 1 is in fault
1	Detector 2 is in fault
2	Detector 3 is in fault
3	Detector 4 is in fault
7	At least one of the above detectors is in fault.

### 11.4 Fault Event Log – Cause Description

The following Table 7 describes the cause as reported by the read event log commands:

**Table 7: Fault Event Log – Cause Description**

Code	Cause
0	No Fault
1	Low Voltage Fault
2	COPM Fault
3	Reset Short
4	Checksum error

### 11.5 Maintenance Event Log – Cause Description

The following Table 8 describes the cause as reported by the read event log commands:

**Table 8: Maintenance Event Log – Cause Description**

Bits	Cause
0	Test Lamp Successful Calibrate
1 – 15	N/A

## 11.6 DIP Switch Settings Register

The following Table 9 describes the description of the unit options registers:

**Table 9: DIP Switch Settings Register Description**

#	Option	Off/Open = 0	On/Closed = 1
1	High Sensitivity	1 and 2	
2	Medium Sensitivity	2	1
3	Low Sensitivity	1	2
4	0-Second ALARM Time Delay		3 and 4
5	8-Second ALARM Time Delay	3	4
6	10-Second ALARM Time Delay	3 and 4	
7	14-Second ALARM Time Delay	4	3
8	ALARM Non-Latching	5	
9	ALARM Latching		5
10	WARN Non-Latching	6	
11	WARN Latching		6
12	ALARM Normally Energized		7
13	ALARM Normally De-Energized	7	
14	WARN Normally Energized		8
15	WARN Normally De-Energized	8	

## 11.7 Unit Options Settings Register

The following Table 10 describes the description of the unit options registers:

**Table 10: Unit Options Settings**

Off = 0, On = 1, De = De-energized, En = Energized, La = Latched, NL = Non-Latched

	Warn	Alarm	Warn	Alarm	Delay	Delay	Sensitivity	Sensitivity
Bit	8	7	6	5	4	3	2	1
OFF= 0	De	De	NL	NL				
ON =1	En	En	La	La				

### Delay Settings

Time	Bit 4	Bit 3
0 sec	ON	ON
8 sec	ON	OFF
10 sec	OFF	OFF
14 sec	OFF	ON

### Sensitivity Settings

Sensitivity	Bit 2	Bit 1
High	OFF	OFF
Medium	OFF	ON
Low	ON	OFF
Undefined	ON	ON

## 12.0 Performance

### 12.1 Sampling Rates

The FlameGard 5 MSIR HART samples each detector at 10 msec intervals.

### 12.2 Power-up

On power up, the FlameGard 5 MSIR HART executes a self-test procedure, which requires approximately 15 seconds. During this time, the analog output is set to 3.5mA. After the self-test is satisfactorily completed, the unit sets the PV to a value representing the mode of the instrument.

### 12.3 Device Reset

The FlameGard 5 MSIR HART cannot be reset by any command. The unit only resets when power is cycled.

### 12.4 Self-Test

The FlameGard 5 MSIR HART goes through a self-test upon power cycle. Should any of the tests fail, the unit immediately reports a fault condition.

### 12.5 Command Response Delay

The FlameGard 5 MSIR HART responds as follows:

**Table 11: Command Response Times**

Response Type	Response Time
Minimum	20ms
Typical	50ms
Maximum	100ms

### 12.6 Busy and Delayed-Response

The FlameGard 5 MSIR HART does not use delayed-response times.

### 12.7 Long Messages

The largest data field used by the FlameGard 5 MSIR HART is in response to Command 21: 34 bytes including the two status bytes.

### 12.8 Non-Volatile Memory

The FlameGard 5 MSIR HART uses EEPROM to hold the device's configuration parameters. New data is written to this memory immediately on execution of a write command.

## 12.9 Operating Modes

The FlameGard 5 MSIR HART reports flame detection by setting the instrument in a series of different modes.

## 12.10 Write Protection

The FlameGard 5 MSIR HART does not support any write protection mode.

# 13.0 Annex A. Capability Checklist

**Table 12: Capability Checklist**


Manufacturer, model, and revision	General Monitors, Inc. FlameGard 5 MSIR
Device type	Infrared Flame Detector
HART revision	6.0
Device Description available	Yes
Number and type of sensors	4 Internal
Number and type of actuators	0
Number and type of host side signals	1: 4 – 20mA analog
Number of Device Variables	0
Number of Dynamic Variables	1
Mappable Dynamic Variables?	No
Number of common-practice commands	3
Number of device-specific commands	15
Bits of additional device status	8
Alternative operating modes?	No
Burst mode?	No
Write-protection?	Mfg Only

## 14.0 Annex B. Default Configuration

Table 13: Default Configuration

Parameter	Default value
Lower Range Value	N/A
Upper Range Value	N/A
PV Units	FlameGard 5 MSIR HART Operating Mode
Sensor type	Pyroelectric Infrared
Number of wires	3
Damping time constant	N/A
Fault-indication jumper	N/A
Write-protect jumper	N/A
Number of response preambles	5

## 15.0 Annex C. Device Descriptor Language Menu

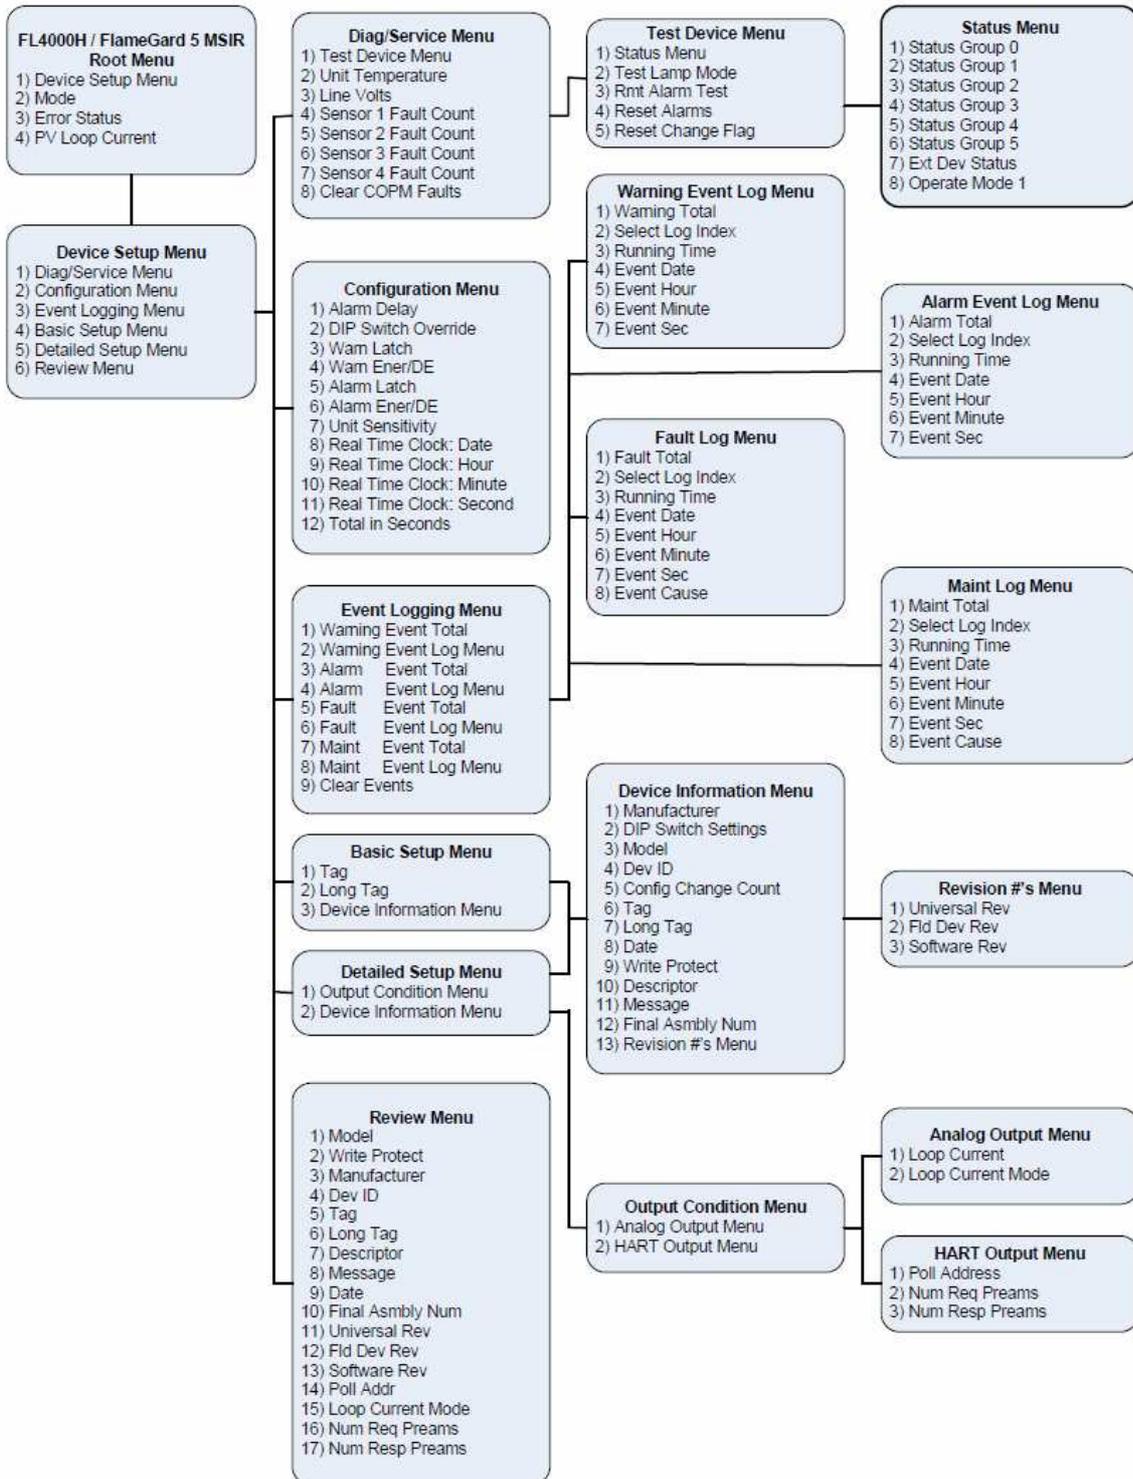

# MSA in Europe

[ [www.msa-europe.com](http://www.msa-europe.com) & [www.msa-gasdetection.com](http://www.msa-gasdetection.com) ]

## Northern Europe

### Netherlands

#### MSA Nederland

Kernweg 20  
1627 LH Hoorn  
Phone +31 [229] 25 03 03  
Fax +31 [229] 21 13 40  
[info@msanet.nl](mailto:info@msanet.nl)

### Belgium

#### MSA Belgium

Duwijckstraat 17  
2500 Lier  
Phone +32 [3] 491 91 50  
Fax +32 [3] 491 91 51  
[msabelgium@msa.be](mailto:msabelgium@msa.be)

### Great Britain

#### MSA Britain

Lochard House  
Linnet Way  
Strathclyde Business Park  
BELLSHILL ML4 3RA  
Scotland  
Phone +44 [16 98] 57 33 57  
Fax +44 [16 98] 74 0141  
[info@msabritain.co.uk](mailto:info@msabritain.co.uk)

### Sweden

#### MSA NORDIC

Kopparbergsgatan 29  
214 44 Malmö  
Phone +46 [40] 699 07 70  
Fax +46 [40] 699 07 77  
[info@msanordic.se](mailto:info@msanordic.se)

### MSA SORDIN

Rörläggarvägen 8  
33153 Värnamo  
Phone +46 [370] 69 35 50  
Fax +46 [370] 69 35 55  
[info@sordin.se](mailto:info@sordin.se)

## Southern Europe

### France

#### MSA GALLET

Zone Industrielle Sud  
01400 Châtillon sur  
Chalaronne  
Phone +33 [474] 55 01 55  
Fax +33 [474] 55 47 99  
[message@msa-gallet.fr](mailto:message@msa-gallet.fr)

### Italy

#### MSA Italiana

Via Po 13/17  
20089 Rozzano [MI]  
Phone +39 [02] 89 217 1  
Fax +39 [02] 82 59 228  
[info-italy@msa-europe.com](mailto:info-italy@msa-europe.com)

### Spain

#### MSA Española

Narcís Monturiol, 7  
Pol. Ind. del Sudoeste  
08960 Sant-Just Desvern  
[Barcelona]  
Phone +34 [93] 372 51 62  
Fax +34 [93] 372 66 57  
[info@msa.es](mailto:info@msa.es)

## Eastern Europe

### Poland

#### MSA Safety Poland

ul. Wschodnia 5A  
05-090 Raszyn k/Warszawy  
Phone +48 [22] 711 50 33  
Fax +48 [22] 711 50 19  
[eer@msa-europe.com](mailto:eer@msa-europe.com)

### Czech Republic

#### MSA Safety Czech

Pikartská 1337/7  
716 07 Ostrava-Radvanice  
Phone +420 [59] 6 232222  
Fax +420 [59] 6 232675  
[info@msa-auer.cz](mailto:info@msa-auer.cz)

### Hungary

#### MSA Safety Hungaria

Francia út 10  
1143 Budapest  
Phone +36 [1] 251 34 88  
Fax +36 [1] 251 46 51  
[info@msa.hu](mailto:info@msa.hu)

### Romania

#### MSA Safety Romania

Str. Virgil Madgearu, Nr. 5  
Ap. 2, Sector 1  
014135 Bucuresti  
Phone +40 [21] 232 62 45  
Fax +40 [21] 232 87 23  
[office@msanet.ro](mailto:office@msanet.ro)

### Russia

#### MSA Safety Russia

Pokhodny Proezd, 14  
125373 Moscow  
Phone +7 [495] 921 1370/74  
Fax +7 [495] 921 1368  
[msa-moscow@msa-europe.com](mailto:msa-moscow@msa-europe.com)

## Central Europe

### Germany

#### MSA AUER

Thiemannstrasse 1  
12059 Berlin  
Phone +49 [30] 68 86 0  
Fax +49 [30] 68 86 15 17  
[info@auer.de](mailto:info@auer.de)

### Austria

#### MSA AUER Austria

Kaplanstrasse 8  
3430 Tulln  
Phone +43 [22 72] 63 360  
Fax +43 [22 72] 63 360 20  
[info@msa-auer.at](mailto:info@msa-auer.at)

### Switzerland

#### MSA Schweiz

Eichweg 6  
8154 Oberglatt  
Phone +41 [43] 255 89 00  
Fax +41 [43] 255 99 90  
[info@msa.ch](mailto:info@msa.ch)

### European

#### International Sales

[Africa, Asia, Australia, Latin  
America, Middle East]

#### MSA EUROPE

Thiemannstrasse 1  
12059 Berlin  
Phone +49 [30] 68 86 55 5  
Fax +49 [30] 68 86 15 17  
[contact@msa-europe.com](mailto:contact@msa-europe.com)